ENTIRE PAGE CONFIDENTIAL BUSINESS INFORMATION

All Weather Floor Mat (AWFM) Inspection, Application and Installation Instructions

STOP Read these important Warnings BEFORE installing ANY type of Floor Mat.
Post this at all locations where Floor Mats are stored and/or installed.

A. General Floor Mat Warnings

- Only install floor mats designed specifically for that model and model year. This applies both to All Weather Floor Mats as well as carpet floor mats.
  - Never install a floor mat if you are uncertain of the model application.
  - Never install the passenger floor mat in the driver's position.
  - Never install the floor mat upside down.
- Always properly secure the driver's floor mat using the retaining hooks (clips) supplied in the bag with the floor mats (in the case of Lexus with the carpet floor mats). If the mat is properly secured and you have confirmed vehicle applicability, it will not interfere with the accelerator pedal.
  - Never install the front driver's floor mat without all retaining hooks (clips) securing the mat firmly in place.
- The retaining hooks (clips) are designed to accommodate only one floor mat at a time.
  - Do not install another floor mat(s) on top of an existing driver's floor mat.
- Never turn the driver's floor mat over on the vehicle floor to keep the mat's top carpet side clean or from wearing out.
- After installation, always check the operation of the accelerator, brake and clutch (if applicable) pedals to assure the floor mat does not interfere with them.
- Do NOT remove the warning tag attached to the front driver's floor mat (Customer to remove only).

B. AWFM Inspection Instructions and Application Information

- **Before placing an AWFM in a vehicle be familiar with the procedure outlined below.**
- **Each dealership associate storing or installing the AWFM should be familiar with the following:**
  - **Identifying the correct AWFM for the specific vehicle application.**
  - **Correctly installing the AWFM.**
- **Permanently mark each AWFM used for TRAC (Service Loaner) vehicles with the correct vehicle application (i.e. make and model year). Regularly check each AWFM to ensure correct application.**
- **Regularly verify the correct AWFM is securely installed in the appropriate model using the retaining hooks (clips).**

1. Inspect all vehicles in dealer stock to ensure that the correct AWFM is securely installed in the vehicle using the retaining hooks (clips).
   - TRAC (Service Loaner Vehicles) both **before** and **after** the vehicle is loaned out to the customer
   - New Vehicle Inventory
   - Used Vehicle Inventory
   - Demonstration Vehicles
   - All vehicles returning from a car wash

   NOTE: Use the Application Information Chart provided or the Accessory Parts Catalog to verify mat-to-vehicle application.

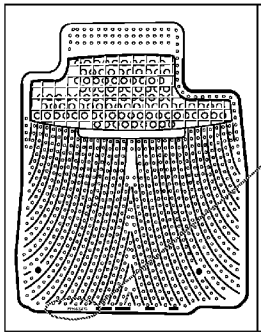

AWFM part number is located on the bottom of the back side of the mat.

(Sample of Application Information Chart)

Model	2004	2005	2006	2007	2008	2009	2010	Mat Description: Color	Mat Description: Piece Set No.	Part Number
ES 350				x	x			Gray	4 pc set	PT908-33071-11
ES 350				x	x			Brown	4 pc set	PT908-33071-14
ES 350				x	x	x	x	Black	4 pc set	PT908-33072-02
ES 350				x	x	x	x	Gray	4 pc set	PT908-33072-11
ES 350				x	x	x	x	Brown	4 pc set	PT908-33072-14

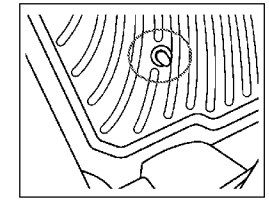

2. Make sure the AWFM is properly secured by the retaining hooks (clips). Confirm that the retaining hooks (clips) are secured into the grommet holes in the vehicle's floor (carpet).

   Warning: Do not stack the floor mats in any vehicle. The retaining hooks (clips) are designed to accommodate only one floor mat at a time.

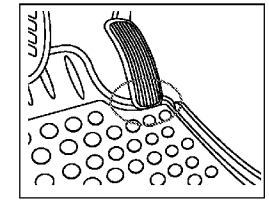

3. Check the following pedal operation (fully depress the pedal) to assure the AWFM does not interfere with it. Make sure the vehicle is turned off and in the "Park" position when testing:
   - Accelerator Pedal
   - Brake Pedal
   - Clutch Pedal (if equipped)

4. Regularly verify that all AWFM involved in SSC 7LB have been purged from your parts inventory and deemed unusable. (Please see SSC 7LB on TIS for further information.)

   SSC 7LB P/N :
   PT908-33070-02 **OR** PT908-33071-02 (Black) DO NOT USE THESE MATS
   PT908-33070-11 **OR** PT908-33071-11 (Gray) DO NOT USE THESE MATS
   PT908-33070-14 **OR** PT908-33071-14 (Brown) DO NOT USE THESE MATS

C. Floor Mat Installation

If you are installing Carpeted or All Weather Floor Mats (AWFM) for the first time, please follow these important instructions.

1. Carefully read the General Floor Mat Warnings.
2. Check for correct part number on the packaging label as well as on the floor mats to confirm vehicle applicability.
3. Check for correct model name on the packaging label to confirm vehicle application.
4. Carefully read the warning tag attached to the driver's floor mat regarding installation.
5. Install only the driver's floor mat in the driver's foot area.
6. Do not install more than one floor mat in the driver's foot area.
7. Follow the floor mat retention clip installation instructions supplied with the clips. The retaining hooks (clips) are supplied in the bag with the floor mats (in the case of Lexus, the hooks (clips) are supplied with the carpet floor mats).
8. Ensure all retaining hooks (clips) supplied with the floor mats are securely installed to the vehicle floor carpet's grommet holes.
9. Install the floor mats securely to the retaining hooks (clips).
10. Verify the driver's floor mat is secured to the vehicle floor by the retaining hooks (clips).
11. Check the following pedal operation to assure the floor mat does not interfere with it:
    - Accelerator Pedal
    - Brake Pedal
    - Clutch Pedal (if equipped)

Spanish translation on back side
Traducción en español en el reverso

MDC Number: 00411-09004

TOY-TQ001-00040719