STOP Read these important Warnings BEFORE installing ANY type of Floor Mat.

A. General Floor Mat Warnings

- Only install floor mats designed specifically for that model and model year. Check for correct model name and part number on the packaging label to confirm vehicle application.
  - Never install a floor mat if you are uncertain of the model application.
  - Never install the floor mat upside down or turned over for any reason.
  - Only install the driver's floor mat in the driver's foot area.
- Always properly secure the driver's floor mat using the retaining hooks (clips) supplied in the bag with the floor mats (in the case of Lexus with the carpet floor mats). Follow the floor mat retention clip installation instruction supplied with the clips. If the mat is properly secured and you have confirmed vehicle applicability, it will not interfere with the accelerator pedal.
  - Never install the front driver's floor mat without all retaining hooks (clips) securing the mat firmly in place.
- The retaining hooks (clips) are designed to accommodate only one floor mat at a time.
  - Do not install another floor mat(s) on top of an existing driver's floor mat.
- After installation, always check the operation of the accelerator, brake and clutch (if applicable) pedals to assure the floor mat does not interfere with them.
- Carefully read the warning tag attached to the driver's floor mat regarding installation.

B. Floor Mat Inspection Instructions and Application Information

- **Before placing a floor mat in a vehicle be familiar with the procedure outlined below.**
  - **Identify the correct driver's floor mat for the specific vehicle application.**
  - **Correctly install the driver's floor mat.**
- **Regularly verify the correct floor mat is securely installed in the appropriate model using the retaining hooks (clips).**

NOTE: Use the Application Information Chart provided or the Accessory Parts Catalog to verify mat-to-vehicle application.

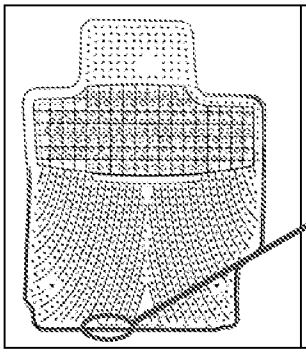

AWFM part number is located on the bottom of the back side of the mat.

(Sample of Application Information Chart)

Model	2003	2004	2005	2006	2007	2008	2009	2010	Mat Description: Color	Mat Description: Piece Set No.	Part Number
Camry	x	x	x	x					Oak	4 pc set	PT206-03036-16
Camry (Front Mats)					x	x			Black	1 pc	PT908-0307F-02
Camry (Front Mats)					x	x			Brown	1 pc	PT908-0307F-14
Camry					x				Black	4 pc set	PT908-32070-02
Camry					x				Brown	4 pc set	PT908-32070-14

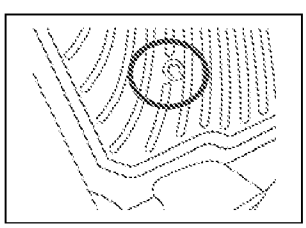

1. Make sure the AWFM is properly secured by the retaining hooks (clips). Confirm that the retaining hooks (clips) are secured into the grommet holes in the vehicle's floor (carpet).

   Warning: Do not stack the floor mats in any vehicle. The retaining hooks (clips) are designed to accommodate only one floor mat at a time.

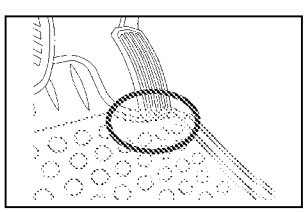

2. Check the following pedal operation (fully depress the pedal) to assure the floor mat does not interfere with it. Make sure the vehicle is turned off and in the "Park" position when testing:
   - Accelerator Pedal
   - Brake Pedal
   - Clutch Pedal (if equipped)
3. Verify the driver's floor mat involved in SSC 70F & 7LB has been removed from your vehicle

DO NOT USE THESE MATS

SSC 70F Part Number:	SSC 7LB Part Number:
PT908-32070-02 (Blk)	PT908-33070-02 **OR** PT908-33071-02 (Blk)
PT908-32070-14 (Brn)	PT908-33070-11 **OR** PT908-33071-11 (Gr)
	PT908-33070-14 **OR** PT908-33071-14 (Brn)

ENTIRE PAGE CONFIDENTIAL BUSINESS INFORMATION